

MUTE

Turn sound on or off.

AUX

Sends commands to auxillary.

VCR

Sends commands to VCR.

VOL +/-

Adjust the volume.

AV

Choose between your TV's different connections.

Info

Display the InfoBar.

Toolkit

Reserved for future use.

Direction Buttons

Move the highlight in system screens.

OK

Enter a choice you have made.

LAST CH

Tune to the previous channel.

Record

Start recording to PVR.

Playback Controls

Control playback of Video On Demand and PVR-recorded programs.

Power

Turn your set top box or TV on and off.

TV

Sends commands to the TV.

STB

Sends command to the set top box.

CH +/-

Change the channel.

MENU

Display the MenuBar.

Guide

Display Guide.

Exit

Close any screen and return to TV.

Navigation Buttons

Allow you to jump through screens in the guide (Refresh and Home are unused).

Number Pad

Enter a channel number or PIN.

DEL

Remove item or backspace.

